

Soft
BY Playful™



Gigi

FULL SILICONE RECHARGEABLE BULLET

USER MANUAL

Gigi

FULL SILICONE RECHARGEABLE BULLET

The *Soft* by Playful™ Gigi is a sleek, pocket-sized bullet, with its 360-degree flexibility and tapered design, you'll be able to hit all your intimate spots effortlessly.

Small but mighty! With a powerful motor, your heart will race with eight increasing speeds, accelerating you to next-level satisfaction. Want a slippery session? Gigi has a seamless silicone wrap which is waterproof, so you can enjoy that sweet bullet bliss in any pleasurable moment.

KEY FEATURES:

- Single motor with 360 degree flexibility
- 8 Vibration speeds
- Body-safe silicone
- 100% waterproof
- Whisper quiet
- Approx 120 minutes of playtime
- User-friendly control
- USB rechargeable
- Includes USB cable & user manual
- Two year Playful replacement warranty



8 VIBRATION
SPEEDS



USB
RECHARGEABLE



WHISPER
QUIET




BODY-SAFE
SILICONE



100%
WATERPROOF

TECHNICAL SPECIFICATIONS:

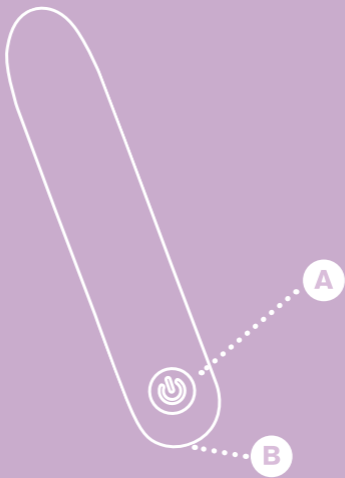

- Category: Full Silicone Rechargeable Bullet
- Motor: Single
- Battery: Rechargeable Li-on
- Noise: <50 dB
- Battery life: Approx 120 minutes
- Charge time: Approx 120 minutes
- Materials: ABS & Silicone
- Size: 19mm(L) x 19mm(W) x 94mm(H)
- Product Code: MV-B1403-purple & MV-B1403-blue



HOW TO USE:

A ON/OFF/CHANGE VIBRATION MODE

B CHARGING CONNECTION

1. Press and hold  for 1.5 seconds to turn on and hold for 3 seconds to turn off.
2. Click  to change through 8 different vibration speeds.

VIBRATION SPEEDS:



CLEANING & STORAGE:

1. Always clean the massager thoroughly before and after each use.
2. Warm water and antibacterial soap are recommended for cleaning the massager.
3. Allow to dry after cleaning.
4. Avoid exposure to direct sunlight.
5. Store the massager in a dry/dust-free location or place in original packaging.

SAFETY:

1. Do not share the massager with others.
2. Immediately stop using the massager if you feel uncomfortable.
3. Only use the massager with a water-based lubricant.
4. Stop use if the exterior of the massager is damaged or rough.
5. Keep away from children.



ATTENTION:

1. Charge prior to use.
2. Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
3. Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

For maximum pleasure, apply water-based lubricant before use.

WARRANTY:

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: support@loveplayful.com

web: www.loveplayful.com

FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

