

Pleasures

BY Playful™



ADMIRER

RECHARGEABLE PANTY VIBE
WITH REMOTE

USER MANUAL

ADMIRER

RECHARGEABLE PANTY VIBE WITH REMOTE

The Pleasures by Playful Admirer Rechargeable Panty Vibe with Remote was created with couples in mind, the contoured design nuzzles gently and effortlessly against clitoris while the remote control offers 10 metre on-the-go satisfaction.

Encased in seamless silicone with a whisper-quiet motor, pleasure awaits with ten orgasmic vibration patterns. Wanna get wet? Both vibe and remote are fully waterproof. Fixed in place with a strong magnet, pair with your favourite panties and get the party started!

KEY FEATURES:

- Single motor with rechargeable remote
- 10 unique patterns of vibration (3 intensity levels)
- Body-safe silicone
- 100% waterproof
- Whisper quiet
- Approx 120 minutes of playtime
- User-friendly control
- USB rechargeable
- Includes 1x spare magnet holder, USB cable, user manual & branded satin pouch
- Two year Playful replacement warranty



10 VIBRATION
PATTERNS



WHISPER
QUIET



USB
RECHARGEABLE



BODY-SAFE
SILICONE




100%
WATERPROOF

TECHNICAL SPECIFICATIONS:



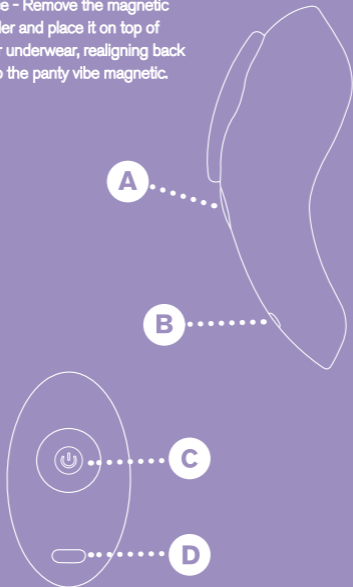

- Category: Rechargeable Panty Vibe with Remote
- Motor: Single
- Battery: Rechargeable Li-on
- Noise: <50 dB
- Battery life: Approx 120 minutes
- Charge time: Approx 60 minutes
- Materials: ABS & Silicone
- Size: 35mm(L) x 44mm(W) x 88mm(H)
- Product Code: LTSV14

To secure the panty vibe in place - Remove the magnetic holder and place it on top of your underwear, realigning back onto the panty vibe magnetic.




HOW TO USE:

- A** ON/OFF/CHANGE VIBRATION MODE
- B** CHARGING CONNECTION
- C** ON/OFF/CHANGE VIBRATION MODE
- D** CHARGING CONNECTION

1. Press and hold A  for 1.5 seconds, a light will appear, then click to turn on and hold for 3 seconds to turn off.
2. Click A  to change through 10 different vibration patterns.
3. To use remote - Click C  to cycle through 10 different vibration patterns. Hold C  for 3 seconds to pause vibration pattern sequence. Click again to continue vibration pattern sequence. (Product must be turned on for remote to sync.

VIBRATION PATTERNS:

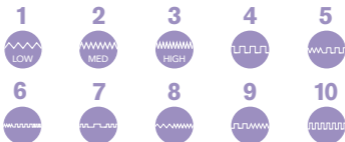

CLEANING & STORAGE:

- 1.** Always clean the massager thoroughly before and after each use.
- 2.** Warm water and antibacterial soap are recommended for cleaning the massager.
- 3.** Allow to dry after cleaning.
- 4.** Avoid exposure to direct sunlight.
- 5.** Store the massager in a dry/dust-free location or place in original packaging.

SAFETY:

- 1.** Do not share the massager with others.
- 2.** Immediately stop using the massager if you feel uncomfortable.
- 3.** Only use the massager with a water-based lubricant.
- 4.** Stop use if the exterior of the massager is damaged or rough.
- 5.** Keep away from children.



ATTENTION:

- 1.** Charge prior to use.
- 2.** Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
- 3.** Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

For maximum pleasure, apply water-based lubricant before use.

WARRANTY:

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: support@loveplayful.com

web: www.loveplayful.com

FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

