

Soft  
BY Playful™



Chic

RECHARGEABLE LONG BULLET VIBE

**USER MANUAL**

# Chic

## RECHARGEABLE LONG BULLET VIBE

The *Soft* by Playful™ Chic is an elegant, super-sized bullet, with its 360-degree flexibility and ridged design, you'll be able to hit all your intimate spots, internally and externally.

With a simple press of a button, treat yourself with eight increasing speeds while the powerful motor packs a punch into orgasmic satisfaction. Squeeze, twist and bend, our seamless super-soft silicone can mould to any body type, are you ready for your erotic adventures?

### KEY FEATURES:

- Single motor with 360 degree flexibility
- 8 vibration speeds
- Super soft silicone
- 100% waterproof
- Whisper quiet
- Approx 90 minutes of playtime
- User-friendly controls
- USB rechargeable
- Includes USB cable, user manual & branded satin pouch
- Two year Playful replacement warranty



8 VIBRATION  
SPEEDS



WHISPER  
QUIET



USB  
RECHARGEABLE




BODY-SAFE  
SILICONE



100%  
WATERPROOF

## TECHNICAL SPECIFICATIONS:

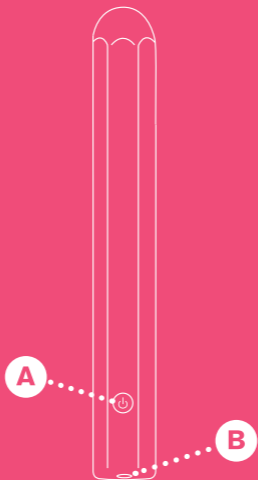

- Category: Rechargeable Long Bullet Vibe
- Motor: Single
- Battery: Rechargeable Li-on
- Noise: <50 dB
- Battery life: Approx 90 minutes
- Charge time: Approx 60 minutes
- Materials: Super soft silicone
- Size: 19mm(L) x 19mm(W) x 142mm(H)
- MV-C1423L - Coral pink & MV-C1423L - Purple



## HOW TO USE:

**A** ON/OFF/CHANGE VIBRATION MODE

**B** CHARGING CONNECTION

1. Press and hold  for 1.5 seconds to turn on and hold for 3 seconds to turn off. Button will illuminate.
2. Click **A**  to change through 8 different vibration speeds.

## VIBRATION SPEEDS:



## **CLEANING & STORAGE:**

- 1.** Always clean the massager thoroughly before and after each use.
- 2.** Warm water and antibacterial soap are recommended for cleaning the massager.
- 3.** Allow to dry after cleaning.
- 4.** Avoid exposure to direct sunlight.
- 5.** Store the massager in a dry/dust-free location or place in original packaging.

## **SAFETY:**

- 1.** Do not share the massager with others.
- 2.** Immediately stop using the massager if you feel uncomfortable.
- 3.** Only use the massager with a water-based lubricant.
- 4.** Stop use if the exterior of the massager is damaged or rough.
- 5.** Keep away from children.



## **ATTENTION:**

- 1.** Charge prior to use.
- 2.** Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
- 3.** Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

**For maximum pleasure, apply water-based lubricant before use.**

## **WARRANTY:**

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

## DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: [support@loveplayful.com](mailto:support@loveplayful.com)

web: [www.loveplayful.com](http://www.loveplayful.com)

## FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

