

Soft
BY Playful™



Sweetheart

RECHARGEABLE STIMULATOR

USER MANUAL

Sweetheart

RECHARGEABLE STIMULATOR

The *Soft* by Playful™ Sweetheart is the perfect go-to vibe for any beginner, with its short shaft, curved bulbous tip and generous sized handle, explore your sexual desires at your pace.

Perfect for shallow play, cycle through eight thrilling vibration patterns with a touch of a button. Wrapped in our seamless super-soft silicone, you'll be able to customize your pleasure session time and time again. Pleasure shouldn't be scary, just needs to be Playfull

KEY FEATURES:

- Single motor with bulbous tip
- 8 unique patterns of vibration (3 intensity levels)
- Super soft silicone
- 100% waterproof
- Whisper quiet
- Approx 60 minutes of playtime
- User-friendly controls
- USB rechargeable
- Includes USB cable, user manual & branded satin pouch
- Two year Playful replacement warranty



8 VIBRATION
PATTERNS



WHISPER
QUIET



USB
RECHARGEABLE




BODY-SAFE
SILICONE



100%
WATERPROOF

TECHNICAL SPECIFICATIONS:

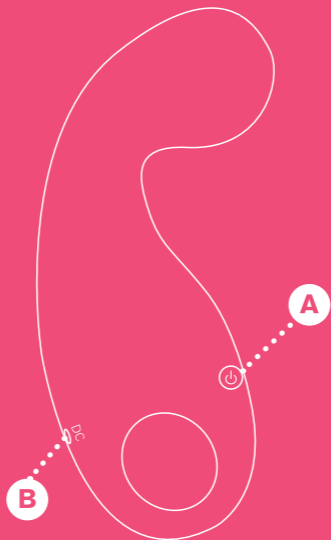

- Category: Rechargeable Stimulator
- Motor: Single
- Battery: Rechargeable Li-on
- Noise: <50 dB
- Battery life: Approx 60 minutes
- Charge time: Approx 120 minutes
- Materials: Super soft silicone
- Size: 45mm(L) x 36mm(W) x 128mm(H)
- MV-G1430 - Coral pink & MV-G1430 - Purple



HOW TO USE:

A ON/OFF/CHANGE VIBRATION MODE

B CHARGING CONNECTION

1. Press and hold  for 1.5 seconds to turn on and hold for 3 seconds to turn off. Button will illuminate.
2. Click **A**  to change through 8 different vibration patterns.

VIBRATION PATTERNS:

1



2



3



4



5



6



7



8



CLEANING & STORAGE:

- 1.** Always clean the massager thoroughly before and after each use.
- 2.** Warm water and antibacterial soap are recommended for cleaning the massager.
- 3.** Allow to dry after cleaning.
- 4.** Avoid exposure to direct sunlight.
- 5.** Store the massager in a dry/dust-free location or place in original packaging.

SAFETY:

- 1.** Do not share the massager with others.
- 2.** Immediately stop using the massager if you feel uncomfortable.
- 3.** Only use the massager with a water-based lubricant.
- 4.** Stop use if the exterior of the massager is damaged or rough.
- 5.** Keep away from children.



ATTENTION:

- 1.** Charge prior to use.
- 2.** Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
- 3.** Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

For maximum pleasure, apply water-based lubricant before use.

WARRANTY:

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: support@loveplayful.com

web: www.loveplayful.com

FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

