

Soft  
BY Playful™



Soft Wand

MASSAGE VIBRATOR

**USER MANUAL**

# Soft Wand

## MASSAGE VIBRATOR

*Soft* by Playful™ Soft Wand indulges in the perfect blend of luxury and performance. Designed to deliver sensational pleasure at the touch of a button, this versatile wand features 5 unique patterns and 5 speeds, allowing you to customise your experience for a truly personalised touch. Crafted from super-soft, body-safe silicone, the Soft Wand feels velvety smooth against your skin, offering a gentle yet powerful vibration. Whether you're seeking gentle stimulation or intense, targeted pleasure, the varying speeds and patterns give you complete control over your experience.

### KEY FEATURES:

- Body Safe Silicone
- 5 Functions / 5 Speeds
- 100% Waterproof
- Whisper quiet
- Up to 180 minutes of playtime
- User-friendly controls
- Magnetic to USB-C rechargeable cable included
- Two year Playful replacements warranty



5 VIBRATION PATTERNS  
5 SPEEDS



MAGNETIC TO USB-C  
RECHARGEABLE



WHISPER  
QUIET



SUPER SOFT  
SILICONE



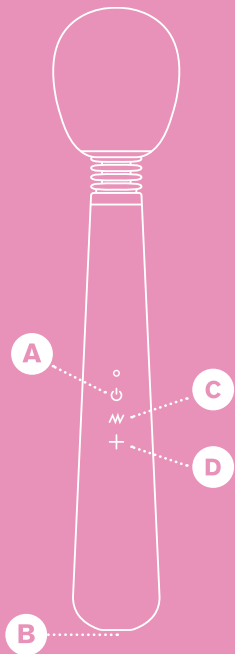
100%  
WATERPROOF



PLAY TIME  
180 MINUTES



## TECHNICAL SPECIFICATIONS:

- Category: Massage Vibrator
- Motor: Single
- Battery Capacity: 540mAh
- Noise: <60 dB
- Charge time: Approx 180 minutes
- Materials: ABS & Silicone
- Size: 27 (L) x 6 (W) x 6 (H) cm
- Code: Pink - BD09-09 Pink Rose Playful Soft
- & Blue - BD09-09 Sky Blue Playful Soft



## HOW TO USE:

- A** ON/OFF/TRAVEL LOCK
- B** MAGNETIC CHARGING PORT
- C** VIBRATION PATTERNS
- D** VIBRATION SPEEDS

1. Hold  for 2 seconds to turn on/off.
2. Tap  3x to turn on/off lock.
3. Patterns (5x) Tap to cycle through.
4. Speeds (5x) Tap to cycle through.

## VIBRATION PATTERNS



Each setting has 5x power intensities

## **CLEANING & STORAGE:**

- 1.** Always clean the massager thoroughly before and after each use.
- 2.** Warm water and antibacterial soap are recommended for cleaning the massager.
- 3.** Allow to dry after cleaning.
- 4.** Avoid exposure to direct sunlight.
- 5.** Store the massager in a dry/dust-free location or place in original packaging.

## **SAFETY:**

- 1.** Do not share the massager with others.
- 2.** Immediately stop using the massager if you feel uncomfortable.
- 3.** Only use the massager with a water-based lubricant.
- 4.** Stop use if the exterior of the massager is damaged or rough.
- 5.** Keep away from children.



## ATTENTION:

1. Charge prior to use.
2. Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
3. Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

**For maximum pleasure, apply water-based lubricant before use.**

## WARRANTY:

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

## DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: [support@loveplayful.com](mailto:support@loveplayful.com)

web: [www.loveplayful.com](http://www.loveplayful.com)

## FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

