

Soft
BY Playful™



Lover

RECHARGEABLE G-SPOT VIBE

USER MANUAL

Lover

RECHARGEABLE G-SPOT VIBE

The *Soft* by Playful™ **Lover** curved tip massages your G-Spot, while the ultra-flexible shaft contours to your body, allowing you to hit all your pleasure spots.

With a powerful motor and easy-to-use single button, ten tantalizing vibration patterns will effortlessly satisfy your every craving. Designed to mould to your inner contours, our softest silicone will turn your normal orgasms into unforgettable experiences!

KEY FEATURES:

- Single motor with flexible shaft
- 10 unique patterns of vibration (3 intensity levels)
- Super Soft Silicone
- 100% waterproof
- Whisper quiet
- Approx 120 minutes of playtime
- User-friendly control
- USB rechargeable
- Includes USB cable & user manual
- Two year Playful replacement warranty



8 VIBRATION
PATTERNS



WHISPER
QUIET



USB
RECHARGEABLE



SUPER SOFT
SILICONE



100%
WATERPROOF

TECHNICAL SPECIFICATIONS:




- Category: Rechargeable G-Spot Vibe
- Motor: Single
- Battery: Rechargeable Li-on
- Noise: <50 dB
- Battery life: Approx 120 minutes
- Charge time: Approx 120 minutes
- Materials: Super Soft Silicone
- Size: 35mm(L) x 38mm(W) x 180mm(H)
- Product Code: OD-6391GS-pink & OD-6391GS-mint



HOW TO USE:

A ON/OFF/CHANGE VIBRATION MODE

B CHARGING CONNECTION

1. Click  once, then click again to turn on and hold for 3 seconds to turn off.
2. Click  to change through 10 different vibration patterns.
3. For Travel Lock – Hold  until the product double vibrates and flashes, repeat to turn off

VIBRATION PATTERNS:

1



2



3



4



5



6



7



8



9



10



CLEANING & STORAGE:

1. Always clean the massager thoroughly before and after each use.
2. Warm water and antibacterial soap are recommended for cleaning the massager.
3. Allow to dry after cleaning.
4. Avoid exposure to direct sunlight.
5. Store the massager in a dry/dust-free location or place in original packaging.

SAFETY:

1. Do not share the massager with others.
2. Immediately stop using the massager if you feel uncomfortable.
3. Only use the massager with a water-based lubricant.
4. Stop use if the exterior of the massager is damaged or rough.
5. Keep away from children.



ATTENTION:

1. Charge prior to use.
2. Clean the massager with warm water and antibacterial soap or medical alcohol prior to use.
3. Only use the massager with premium water based lubricants. Do not use massage oil, hand cream or cleaning solutions, as these liquids will damage the massager and void the warranty.

For maximum pleasure, apply water-based lubricant before use.

WARRANTY:

This product has a two year warranty with replacement for all faults and defects. Warranty is void if fault or defect is caused by misuse or improper handling. Warranty is null and void if product has been damaged or tampered with.

DISCLAIMER:

Any of Playful's distributors, wholesalers and retailers shall not be negligent in any injury, death or unlawful act caused by use or misuse of Playful products. The product is a personal massager, any other use is not recommended and guaranteed. Playful will not be responsible for any complaints or claims if users of Playful products do not read and comply with instructions for use and safety.

email: support@loveplayful.com

web: www.loveplayful.com

FOR NOVELTY USE ONLY.

Playful™

All rights reserved. **Made in China.**

